


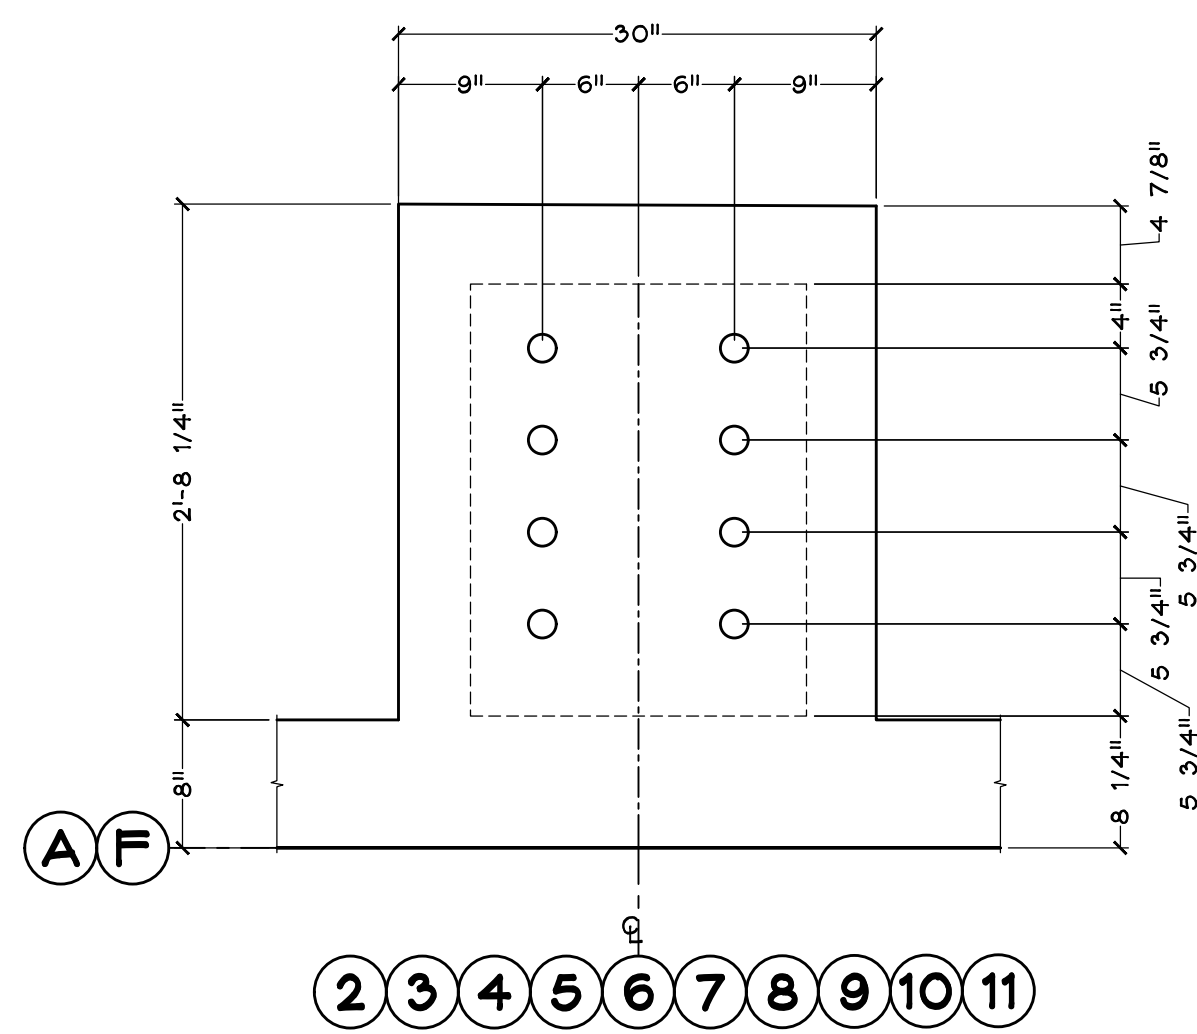
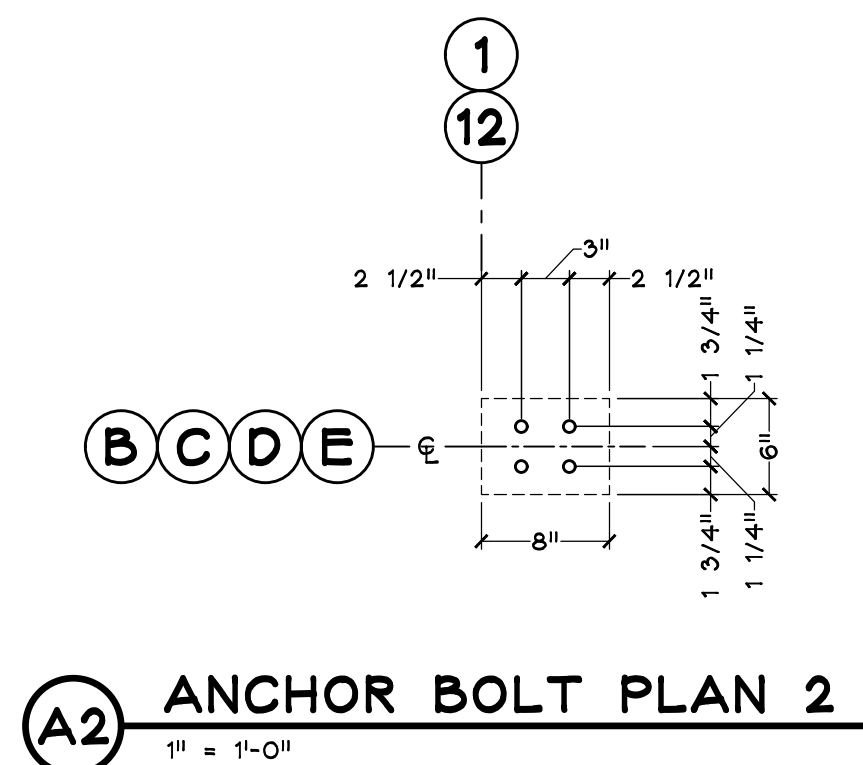


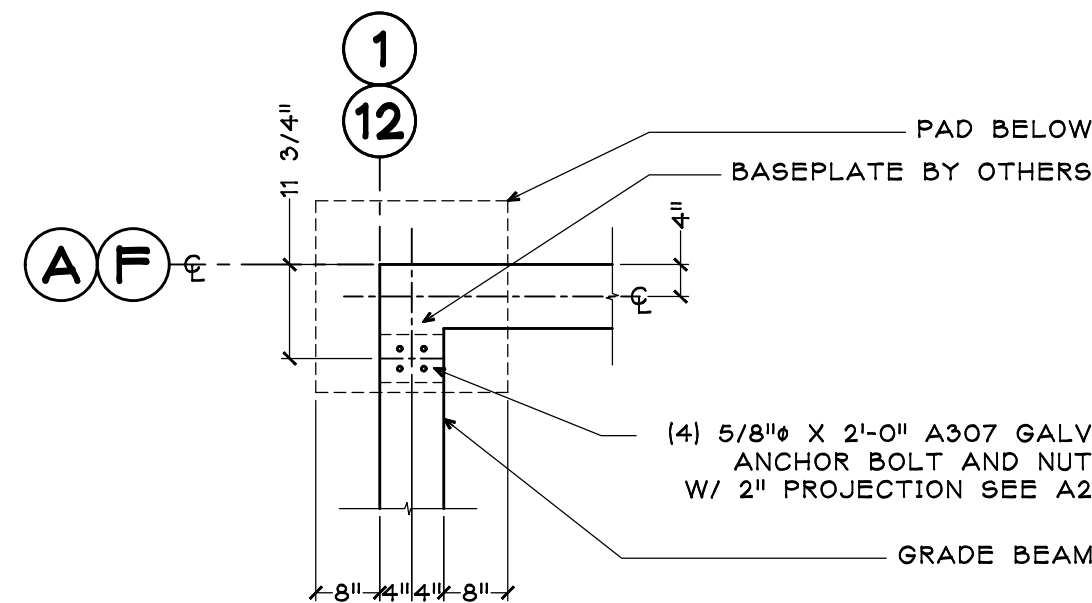


A1 ANCHOR BOLT PLAN 1
1" = 1'-0"

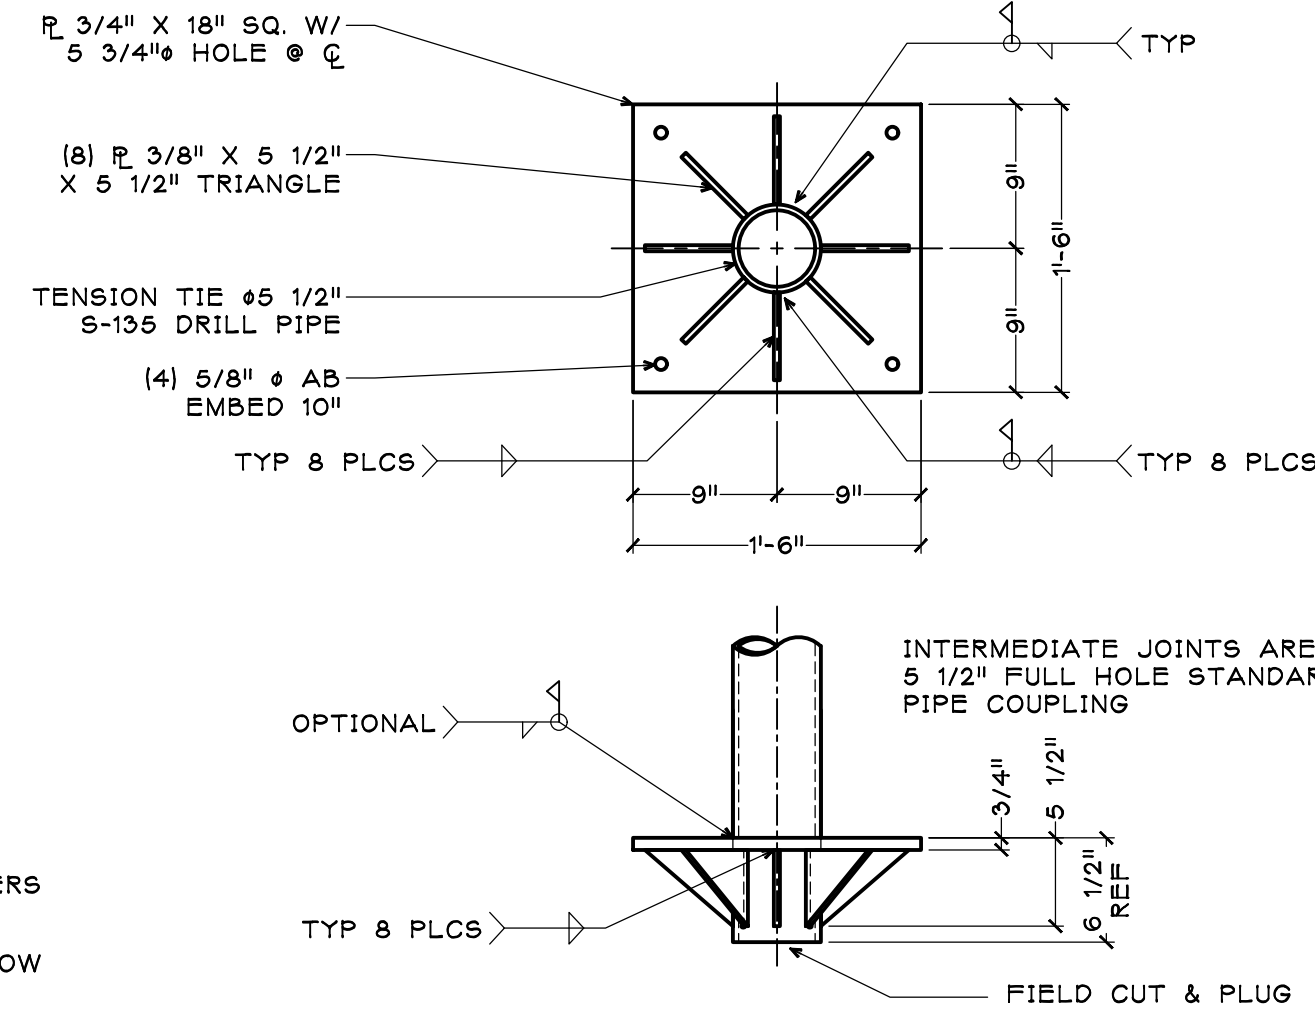


A2 ANCHOR BOLT PLAN 2
1" = 1'-0"

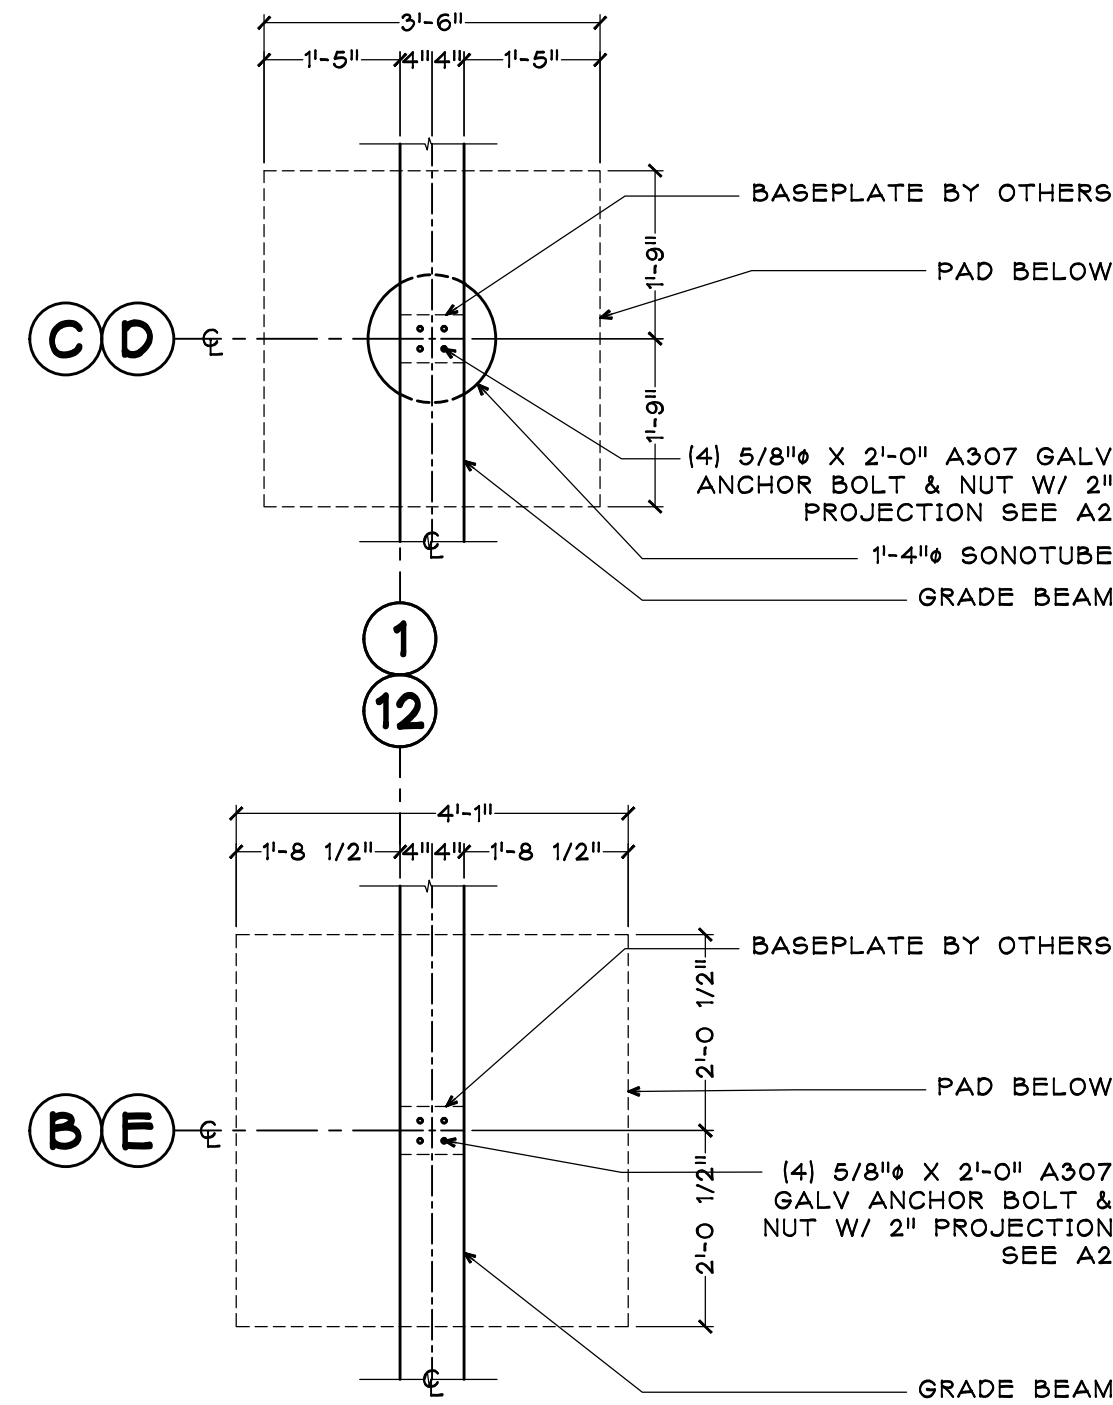


TT TENSION TIE WELDMENT
1" = 1'-0"

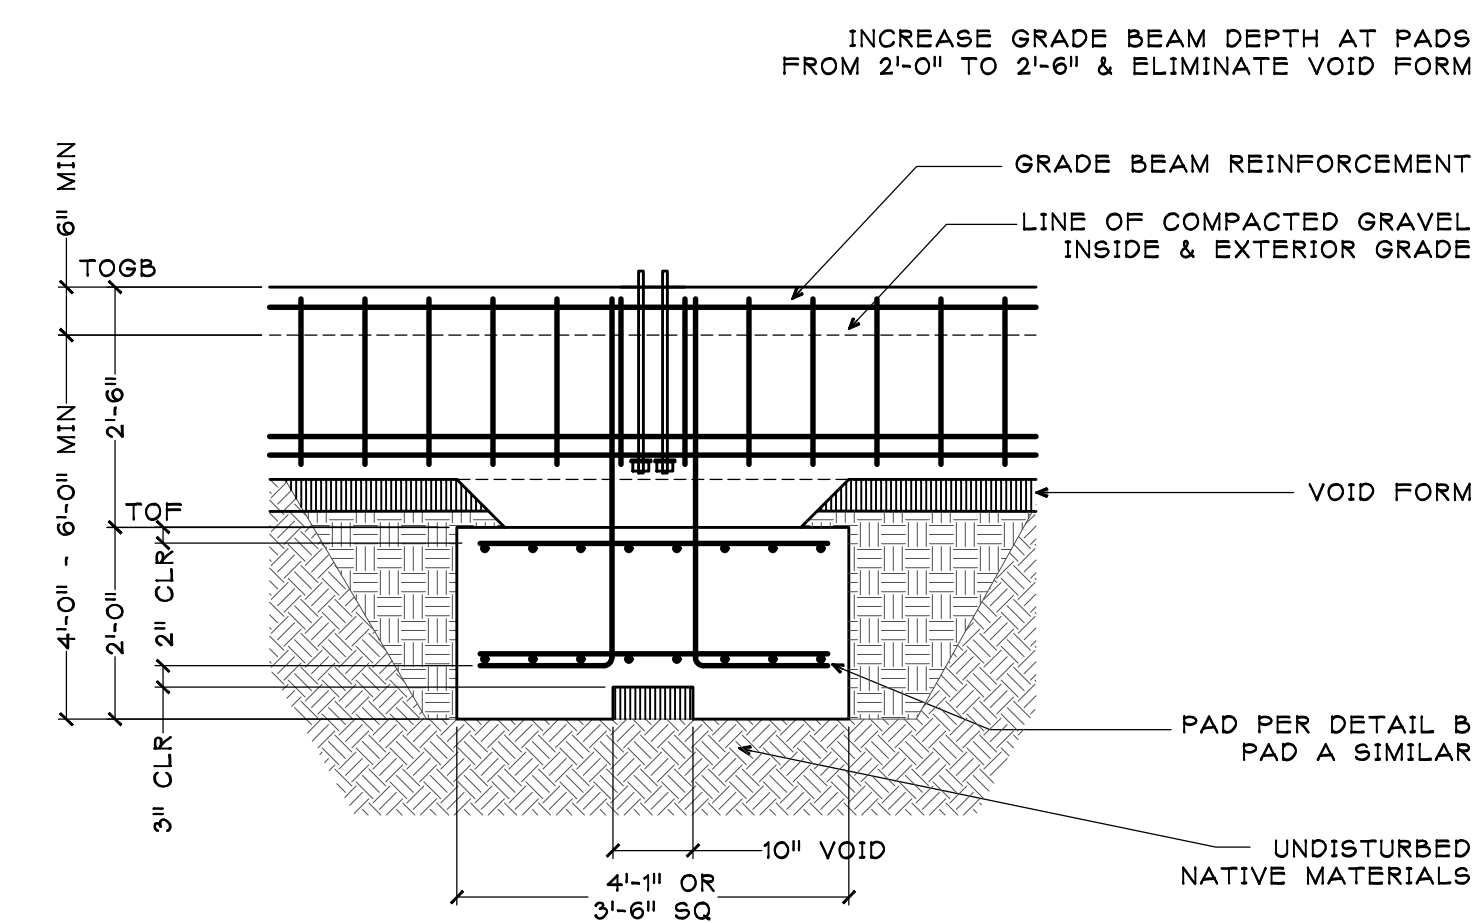


F GRADE BEAM ELEVATION
1/2" = 1'-0"

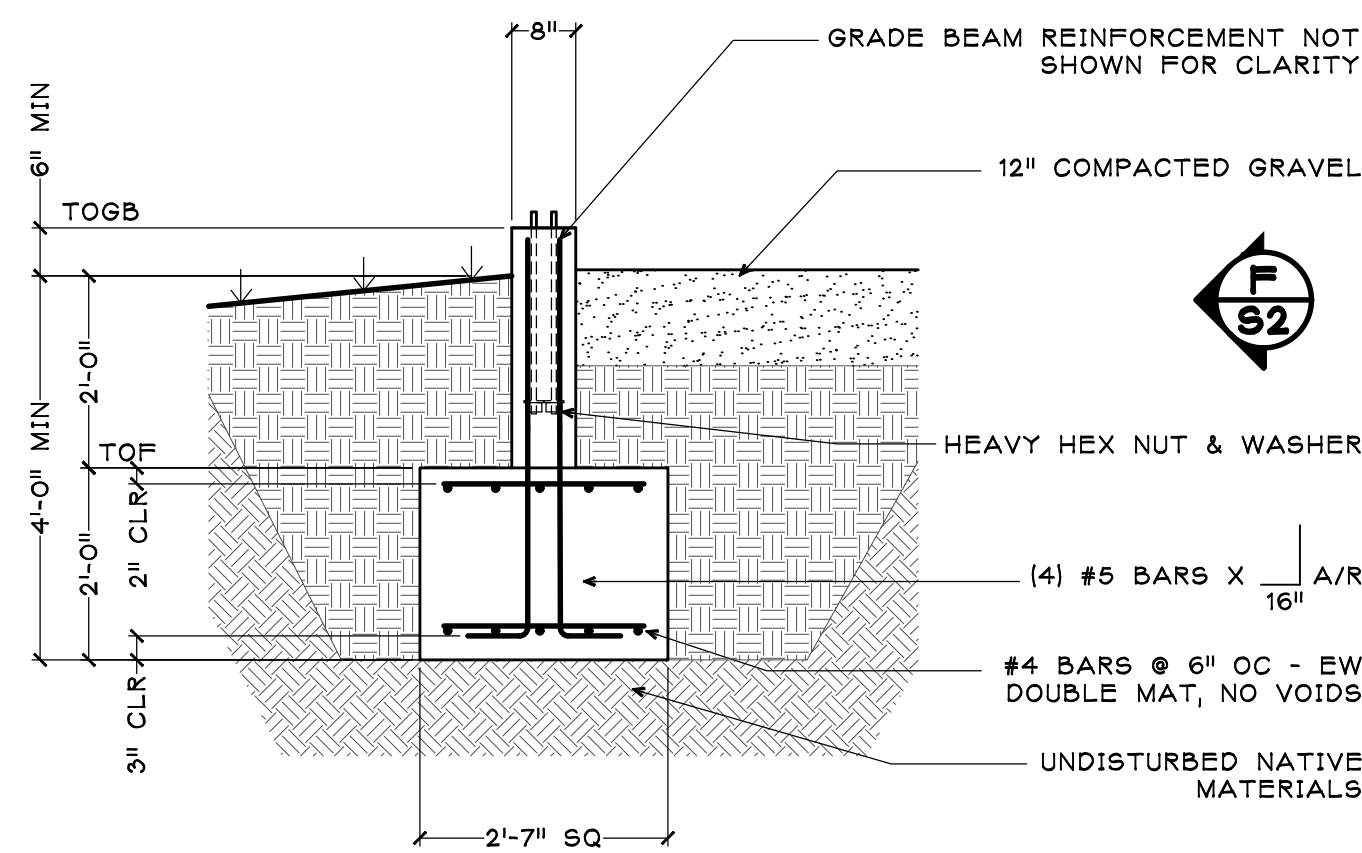


A CORNER PILASTER
1/2" = 1'-0"

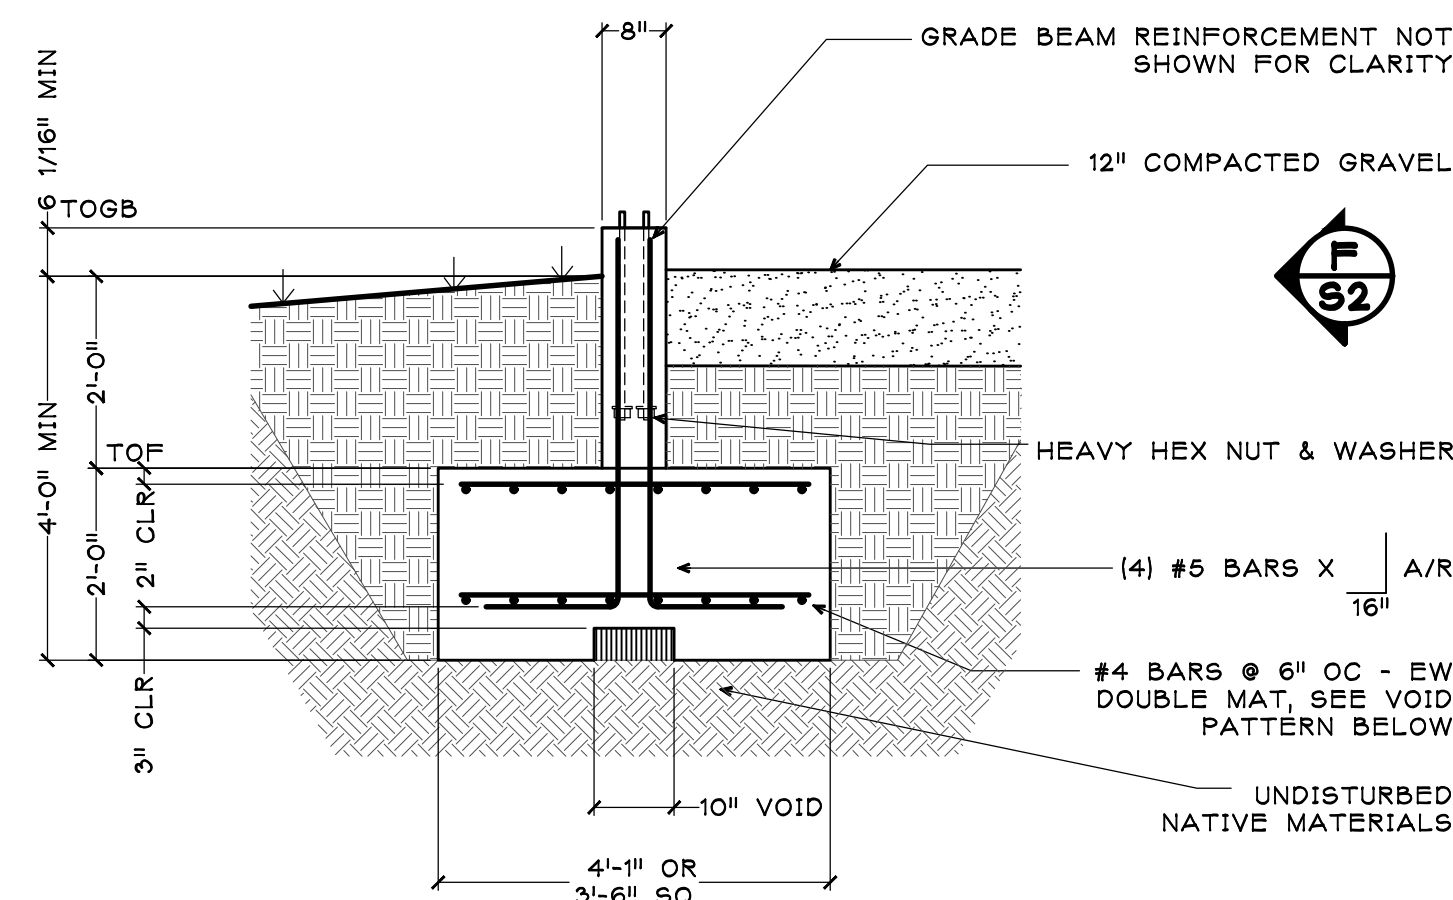


B END WALL PILASTER
1/2" = 1'-0"

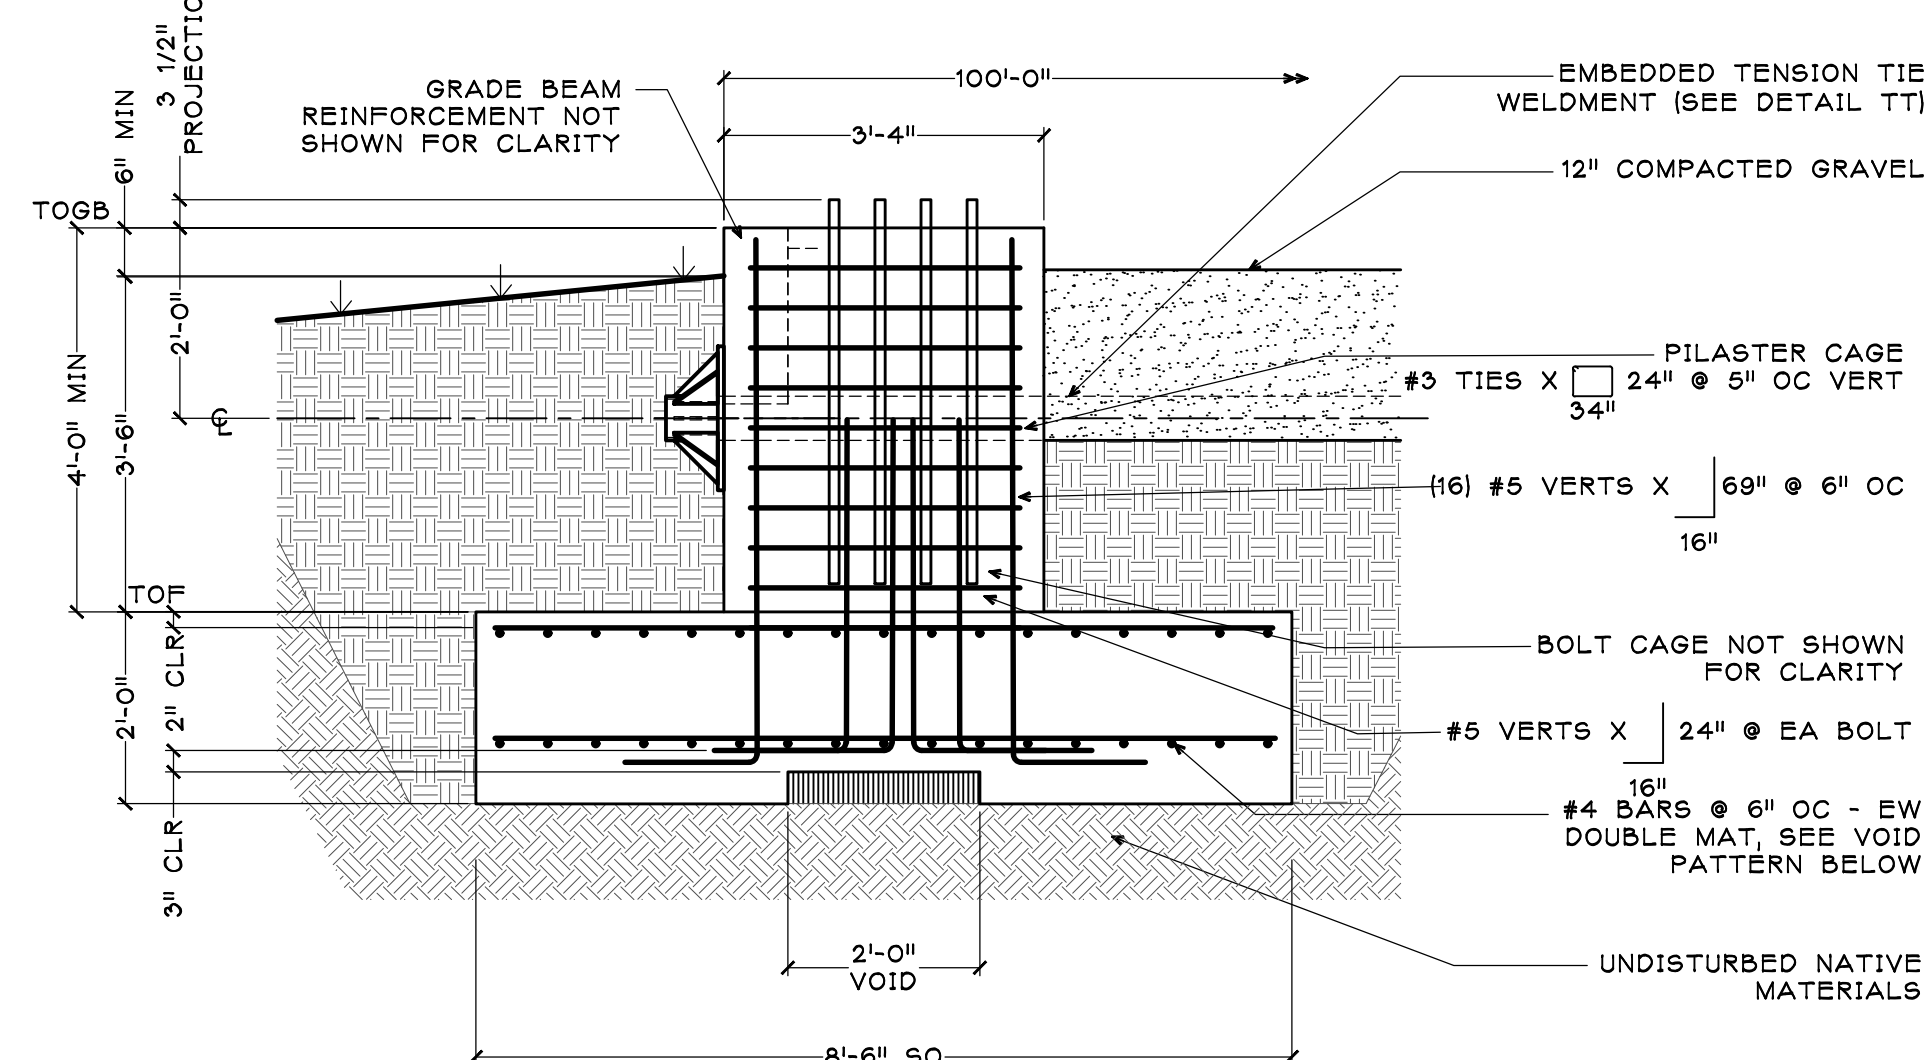


C SIDE WALL PILASTER
1/2" = 1'-0"

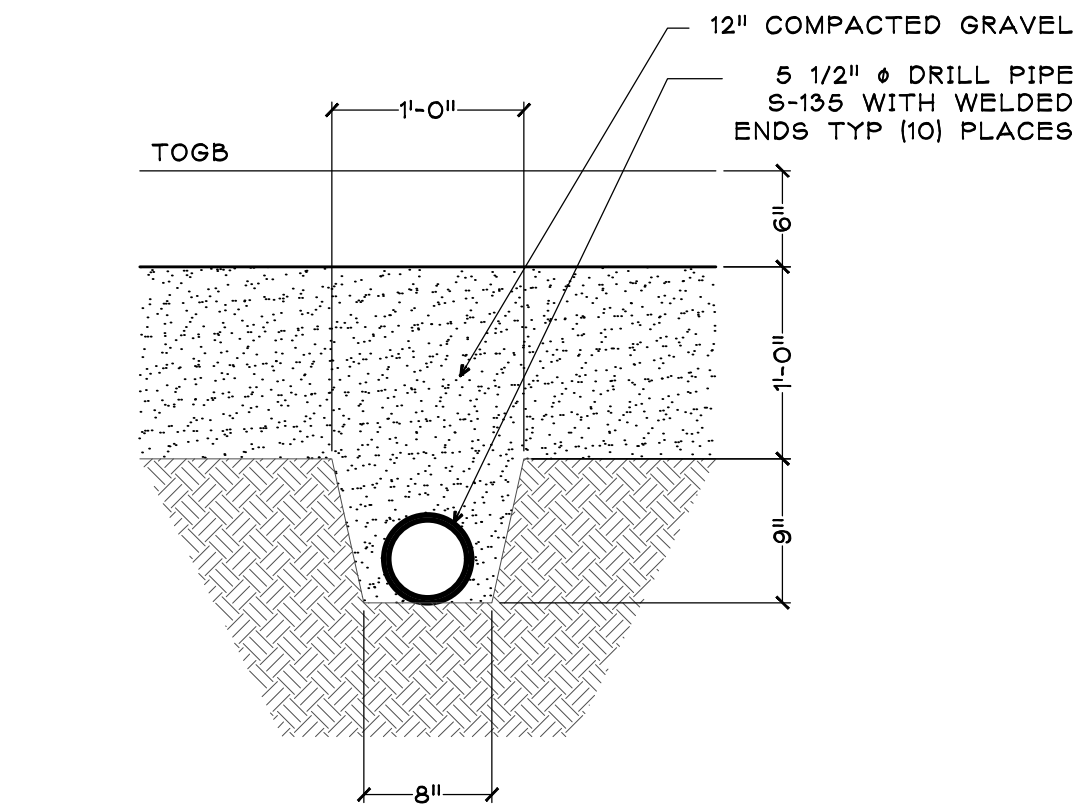


E TENSION TIE
1" = 1'-0"

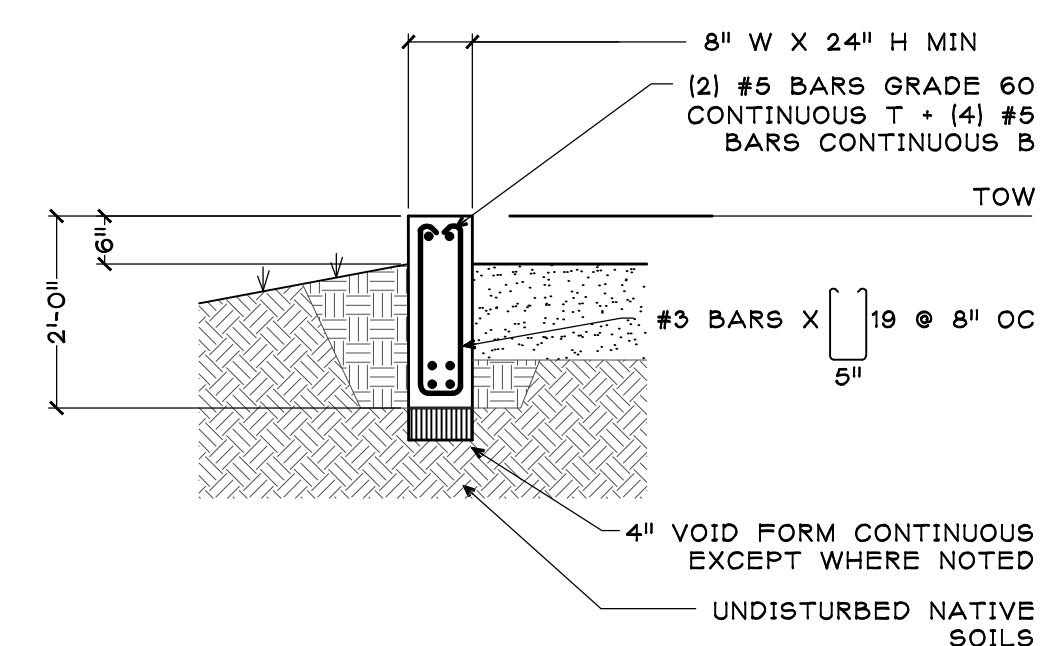

D GRADE BEAM
1/2" = 1'-0"

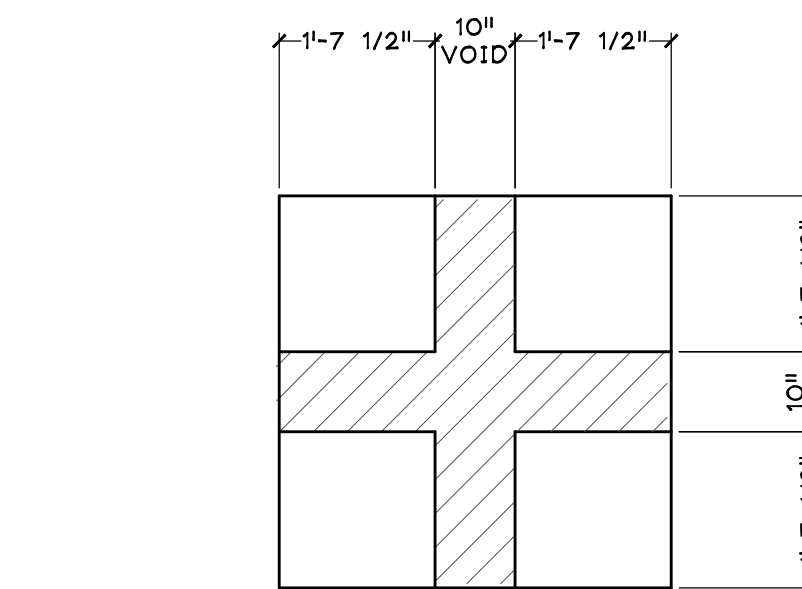

VOID PATTERN
1/2" = 1'-0"

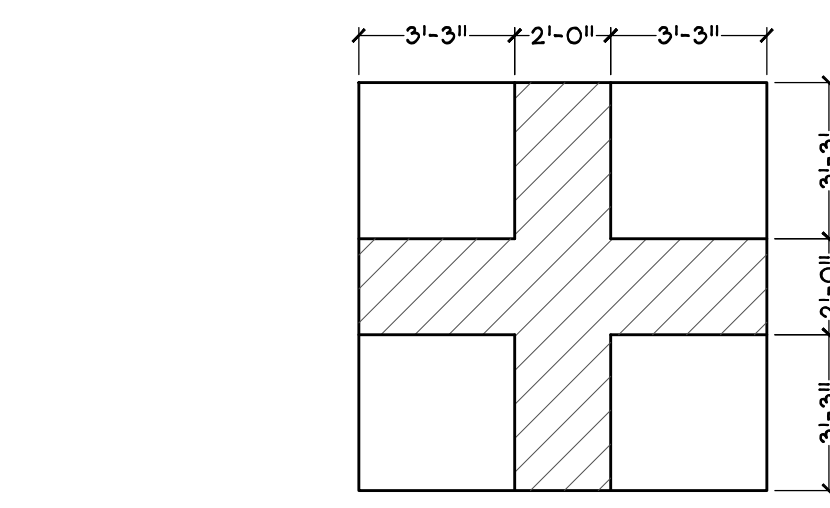

VOID PATTERN
1/4" = 1'-0"

NOTE:
SOILS ENGINEER TO VERIFY ALL CONCRETE IS
PLACED ON ADEQUATE BEARING MATERIAL